


FOR DOG – FOR VETERINARY USE ONLY

LOKI® PL – ACCUJECT PRO™

Implant position

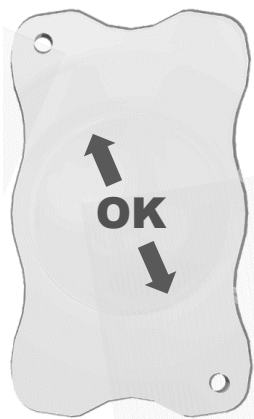

1 Remove the clip.



2 Pour sterile BSS into all the cartridge and onto the IOL. Wait at least 1 minute.



3 Put sterile OVD in the cartridge tip, in front of and on the IOL.



4 Close the wings.

“click”



5 Push the plunger and ensure that the IOL advances normally about 1 cm.



6 Insert the cartridge tip through the eye incision. Push the plunger continuously.

